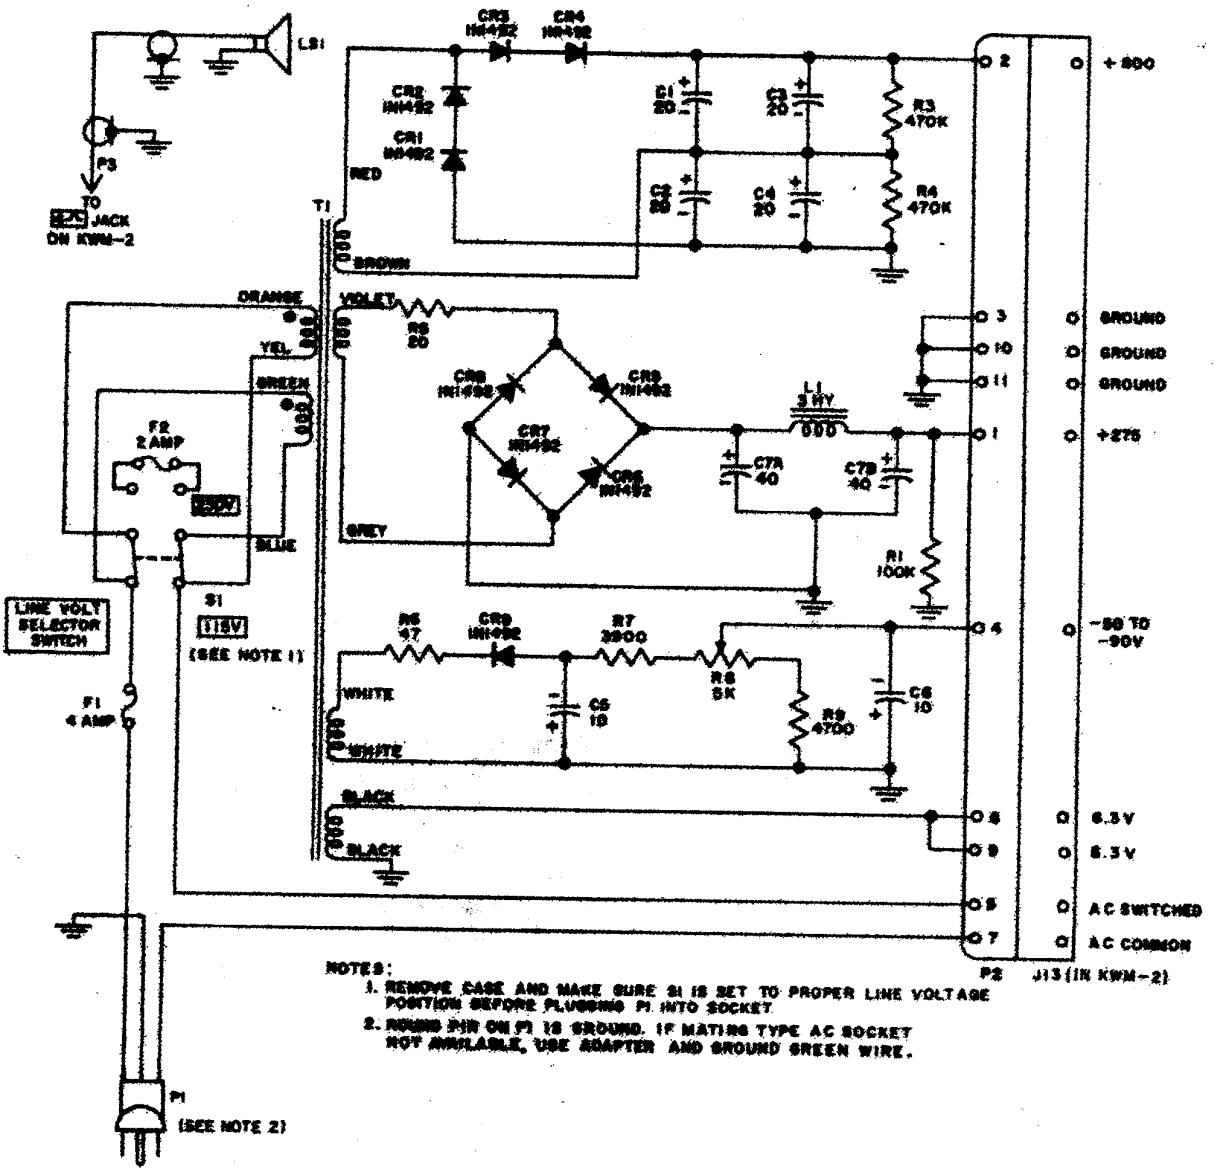

NOTES:

1. REMOVE CASE AND MAKE SURE S1 IS SET TO PROPER LINE VOLTAGE POSITION BEFORE PLUGGING P1 INTO SOCKET.
2. ROUND PIN ON P1 IS GROUND. IF MATING TYPE AC SOCKET NOT AVAILABLE, USE ADAPTER AND GROUND GREEN WIRE.

C497-36-3

Figure 8. PM-2 Lightweight A-C Power Supply, Schematic Diagram